




1. Remove the brown protection paper.

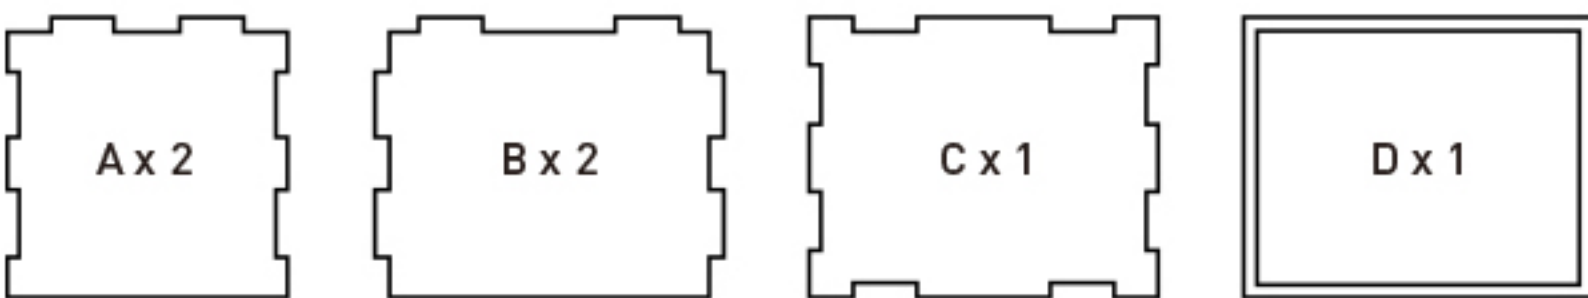

2. Hold A and B perpendicular. Push the tabs into the slots (do one tab/slot at a time).

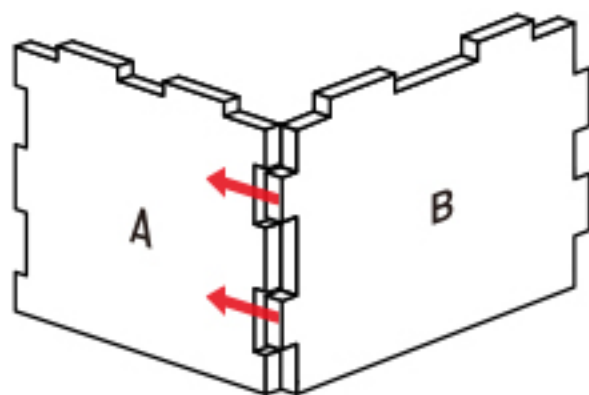

3. Connect 2 halves together.

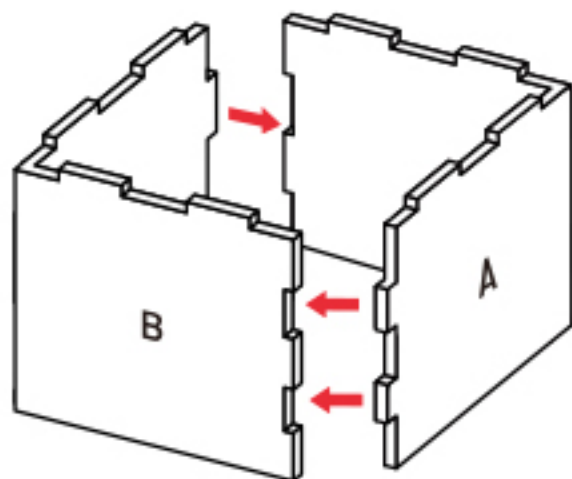

4. Put the top C on. Place the clear cube on the base.

