





It is highly recommended that you visit www.metalearth.com/360/icx141 to see the completed model before assembling your own

THE TERMINATOR™

ICX141 T-800 ENDOSKELETON

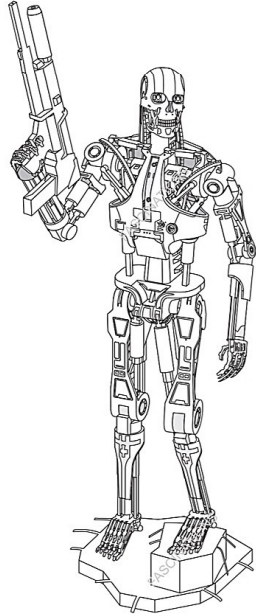

TO CREATE THE BEST CONNECTIONS

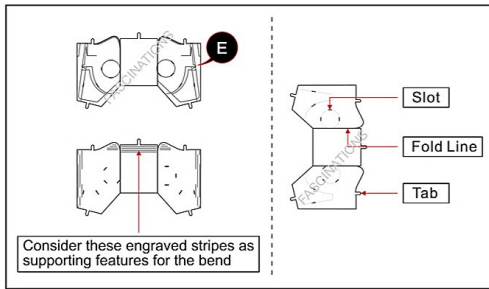

Legends:

- Engraved/Color side
- Non-engraved/Silver side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

Assembly tip:


If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

Recommended tools:

-Wire cutters: helpful for taking parts from the metal sheets.




-Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.



METAL SHEETS

A

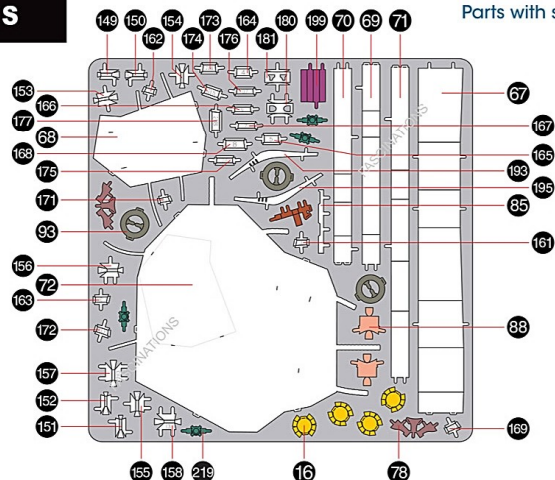


In order to avoid possible injury from sharp edges, please carefully discard the metal sheets after parts have been removed




Go to www.metalearth.com/360/icx141 to see the zoomable PDF version of this instruction sheet


B

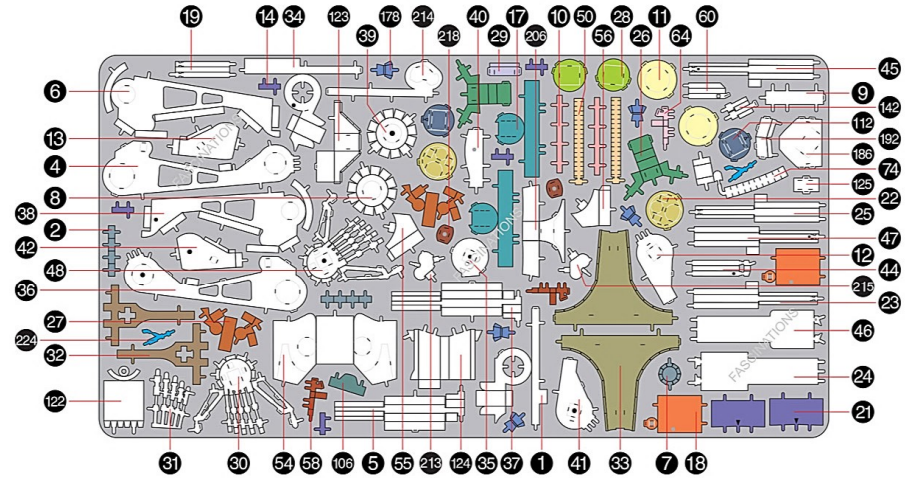

C








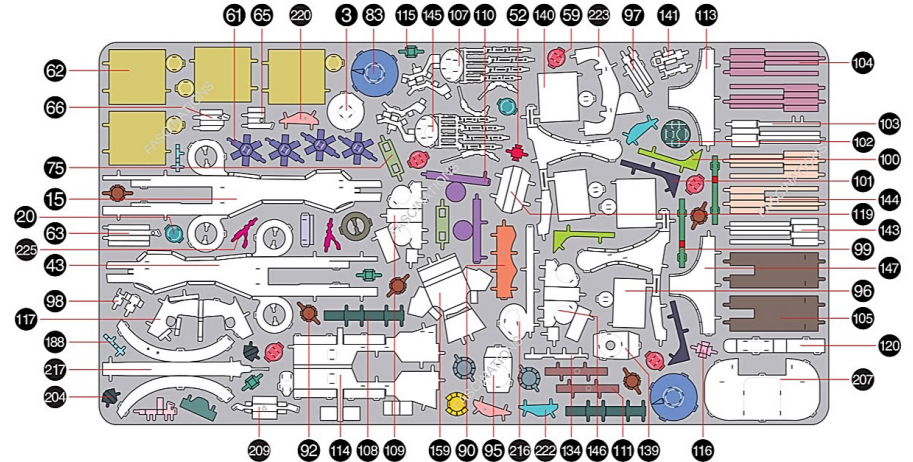


D



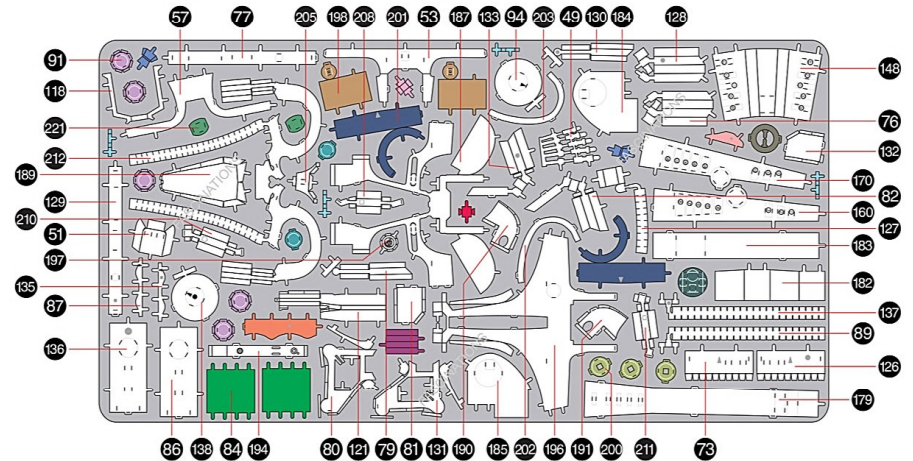


ASSEMBLY STEPS


Step 1

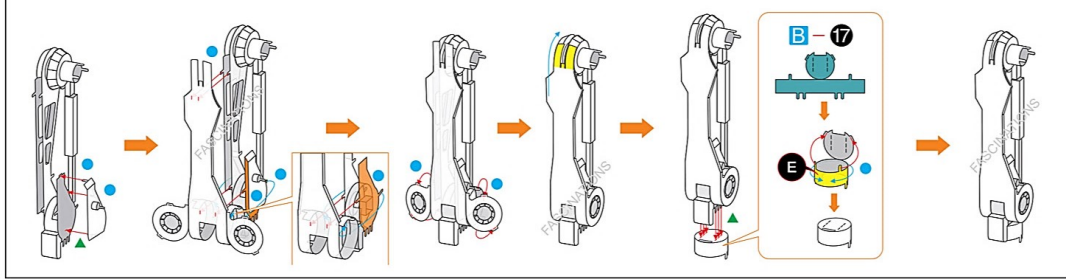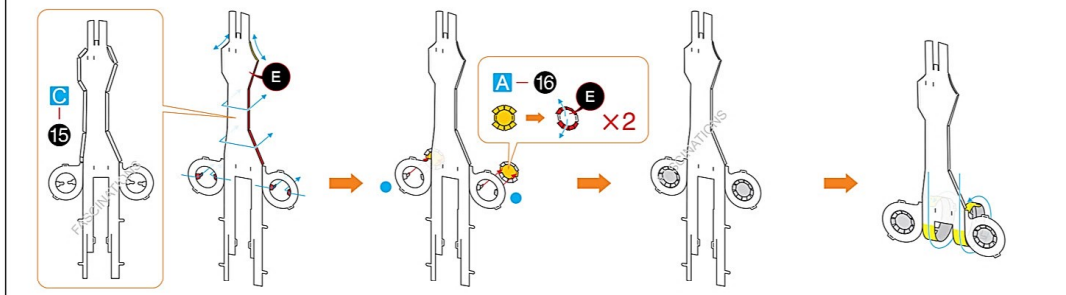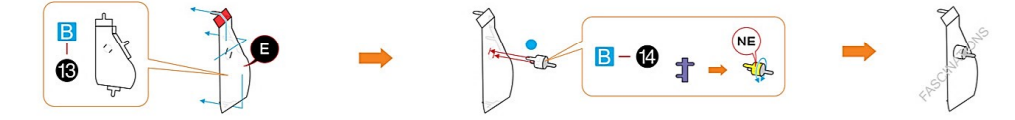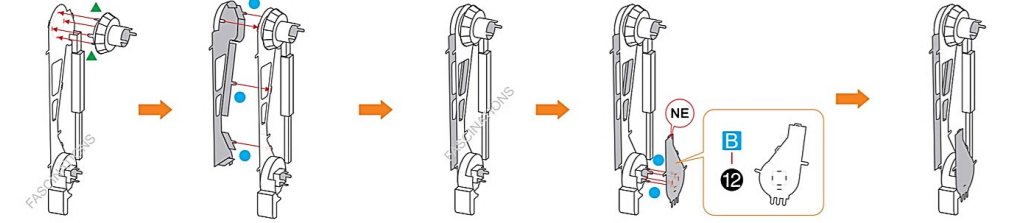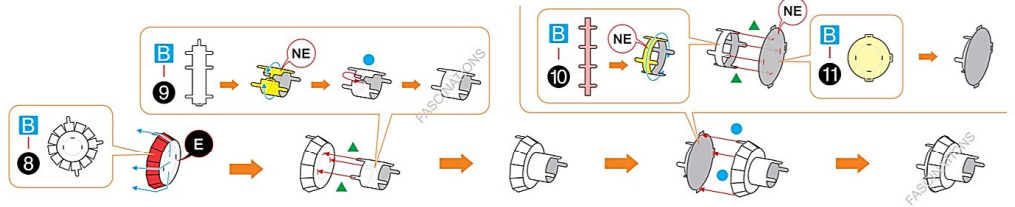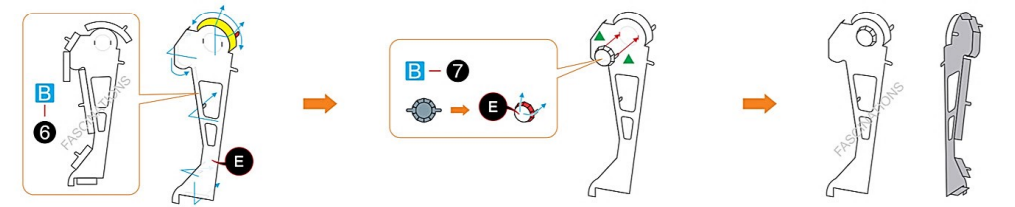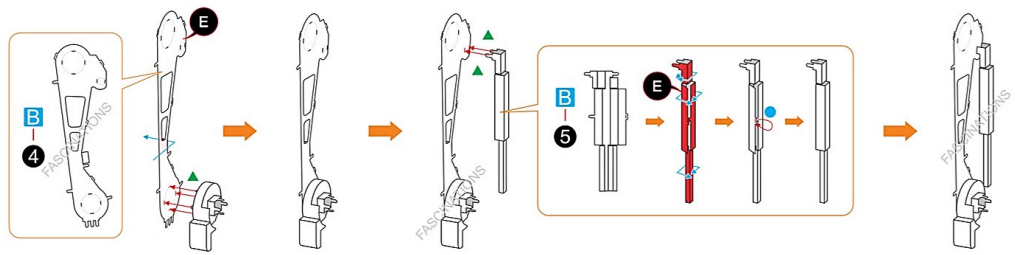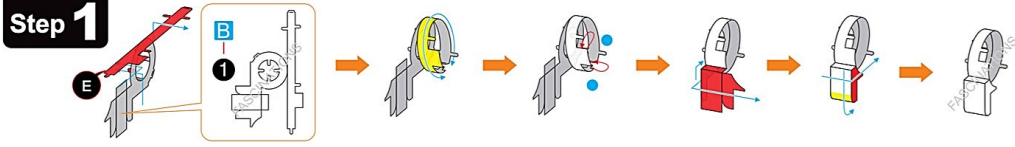


Step 2

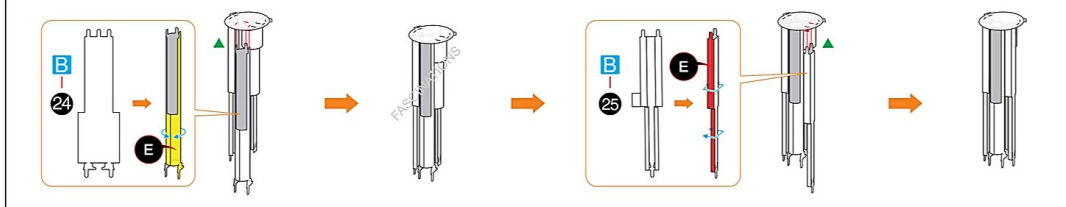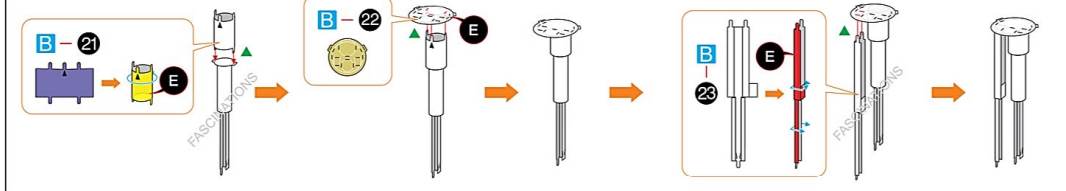
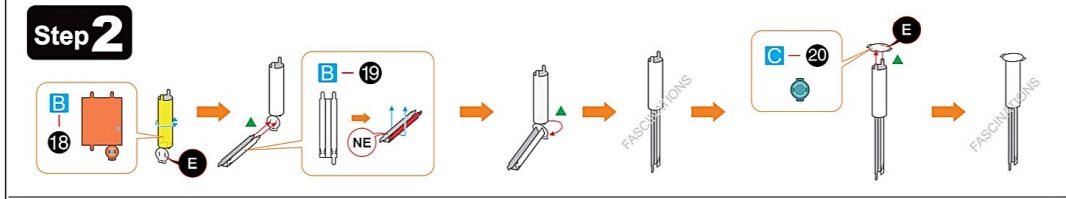


Step 3









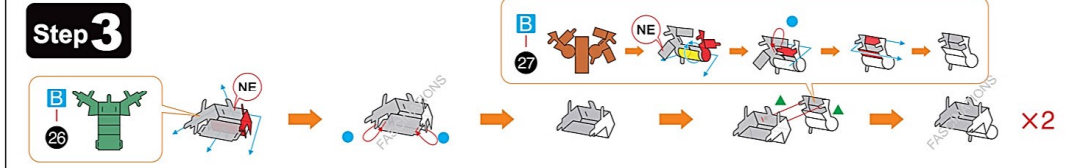


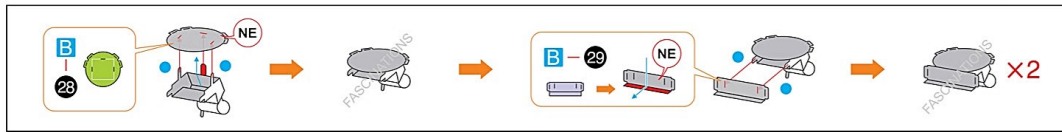




Step 4

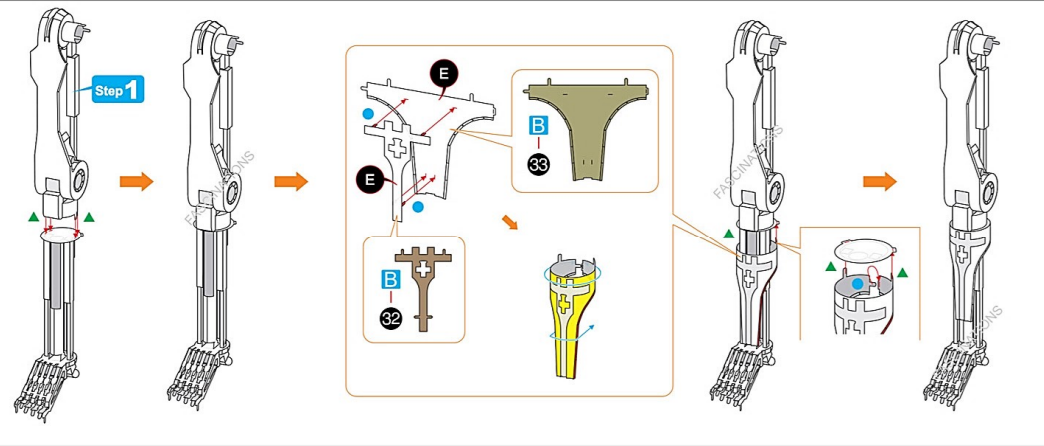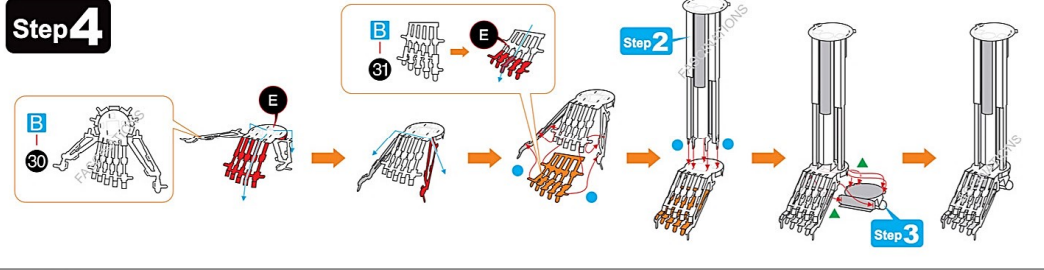


Step 5

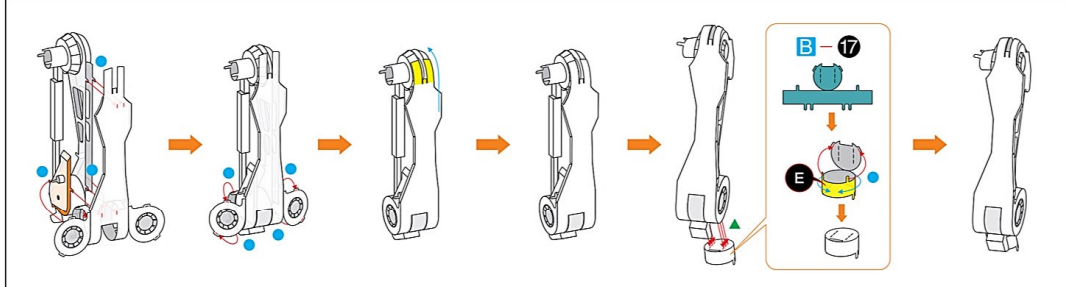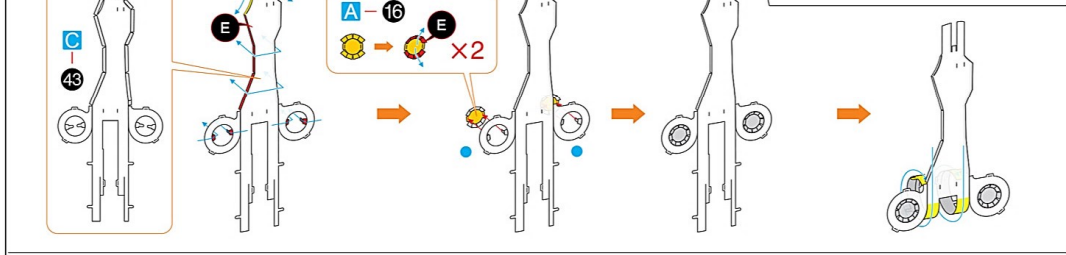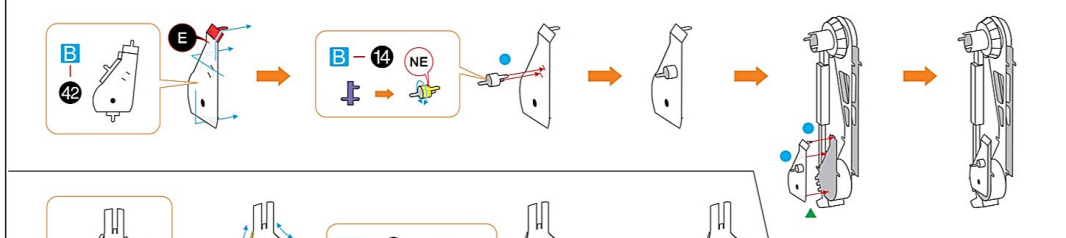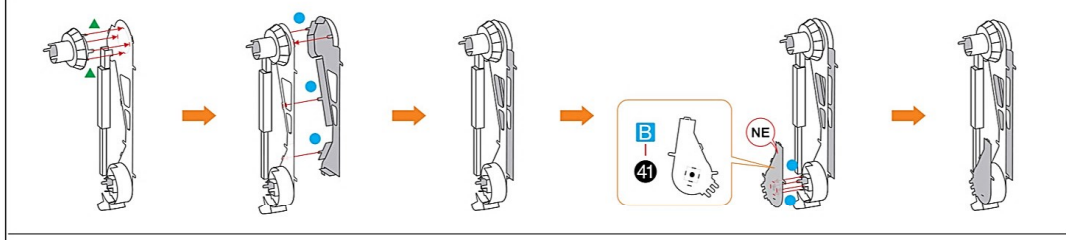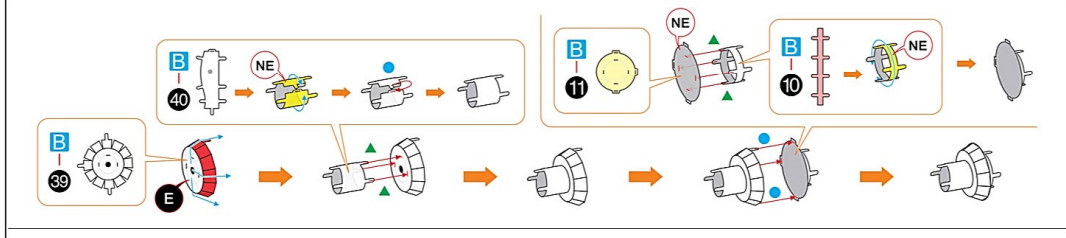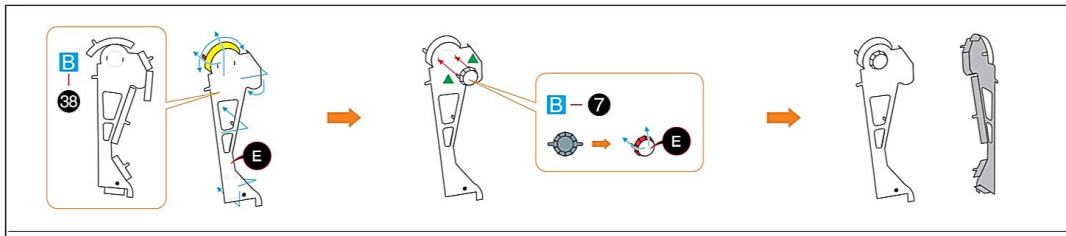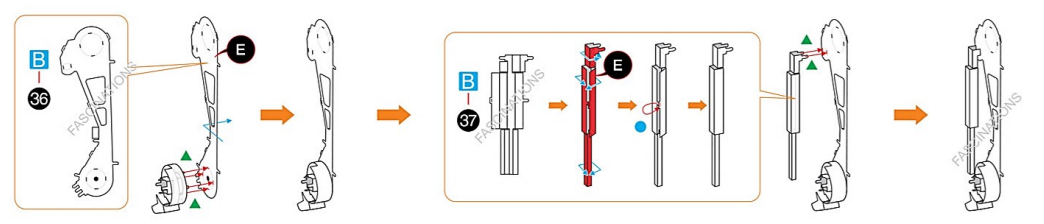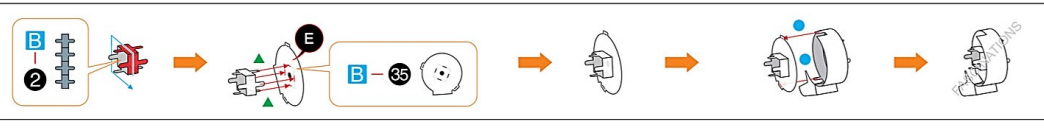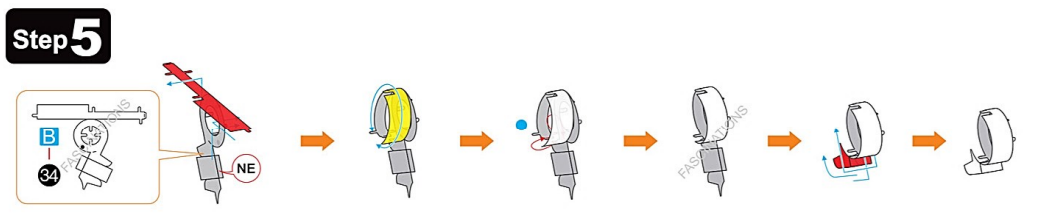


Step 6

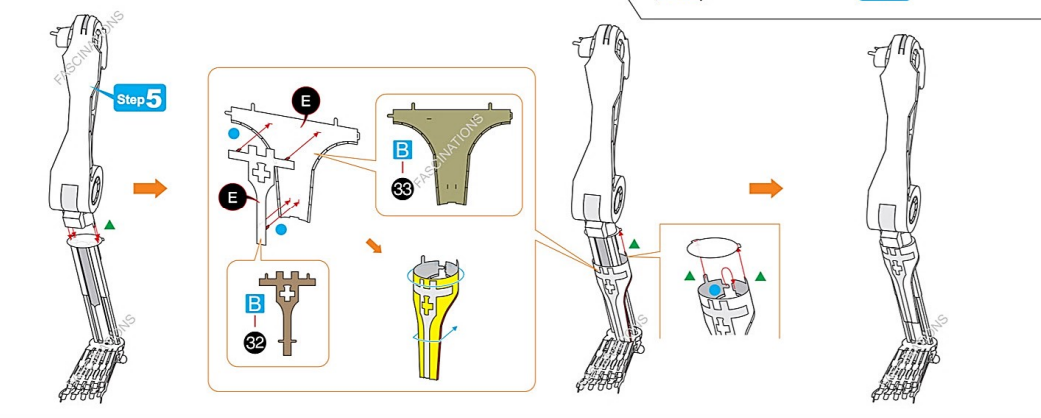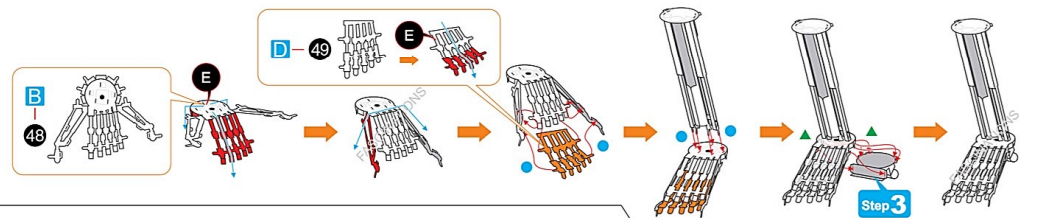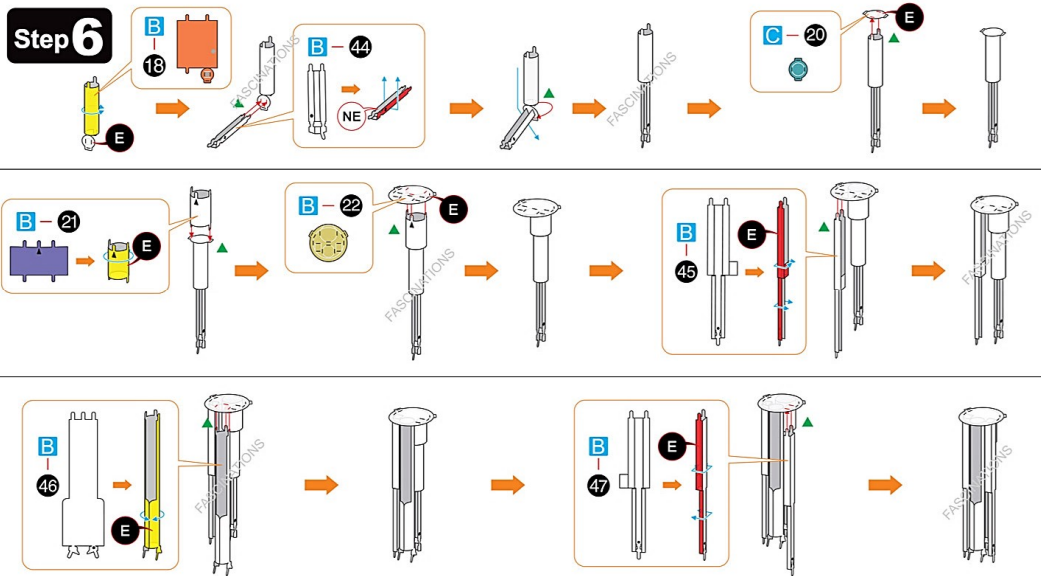


Step 7

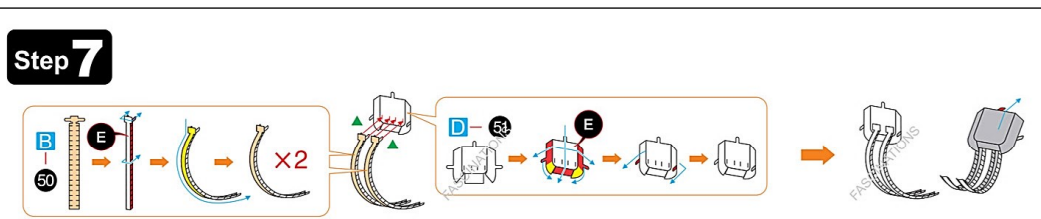





Step 8

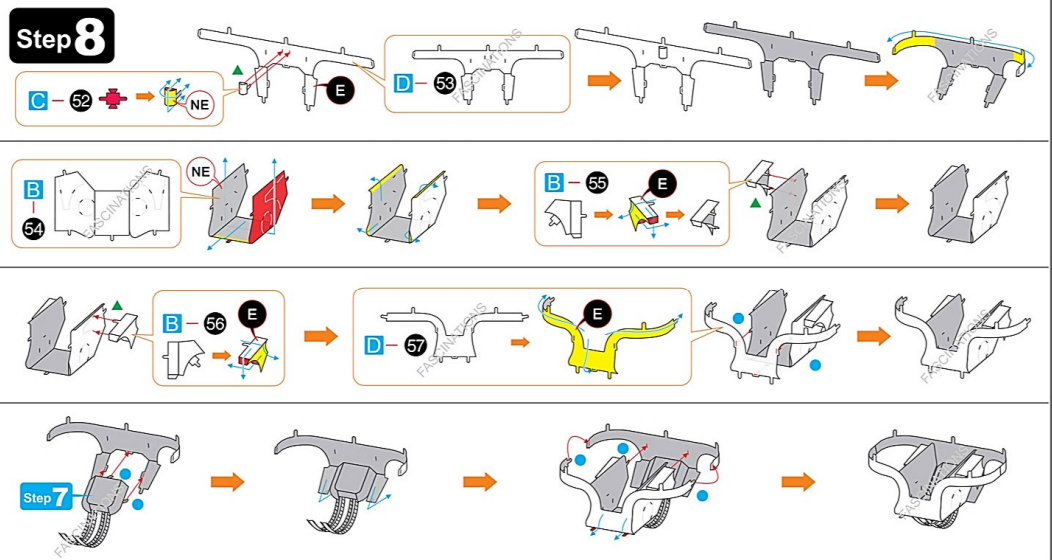


Step 9

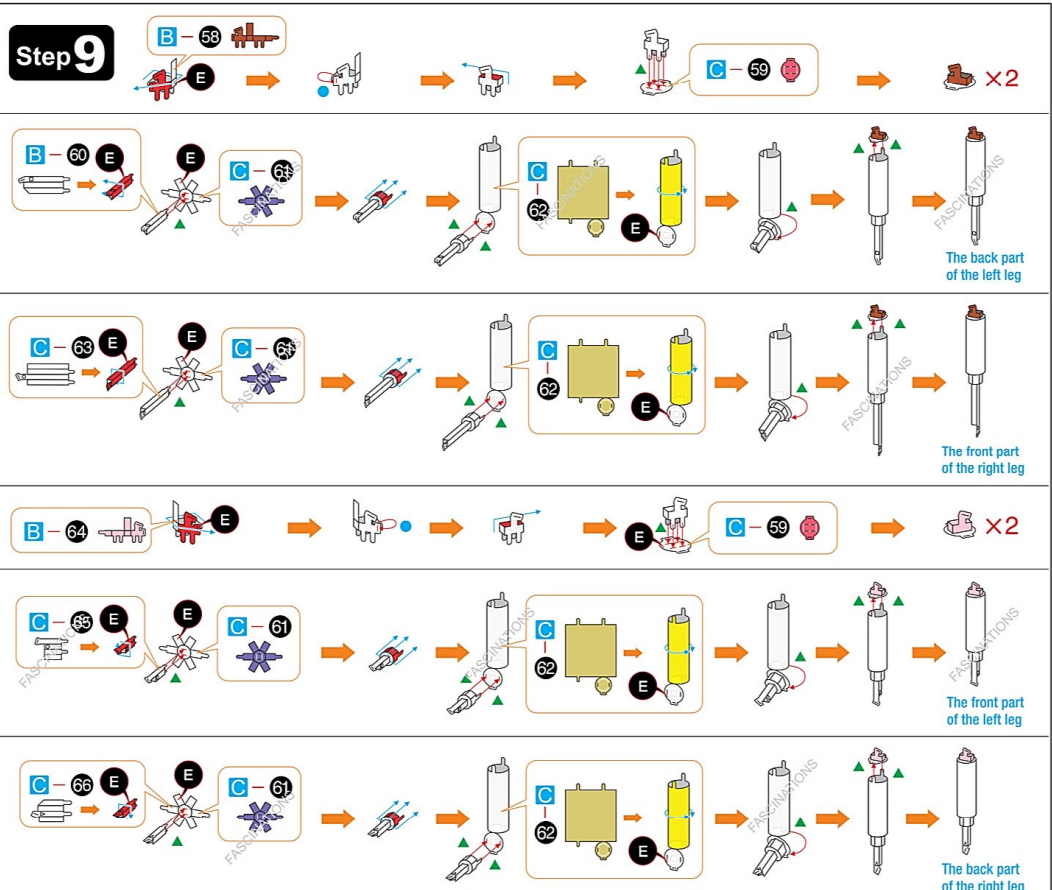








Step 10

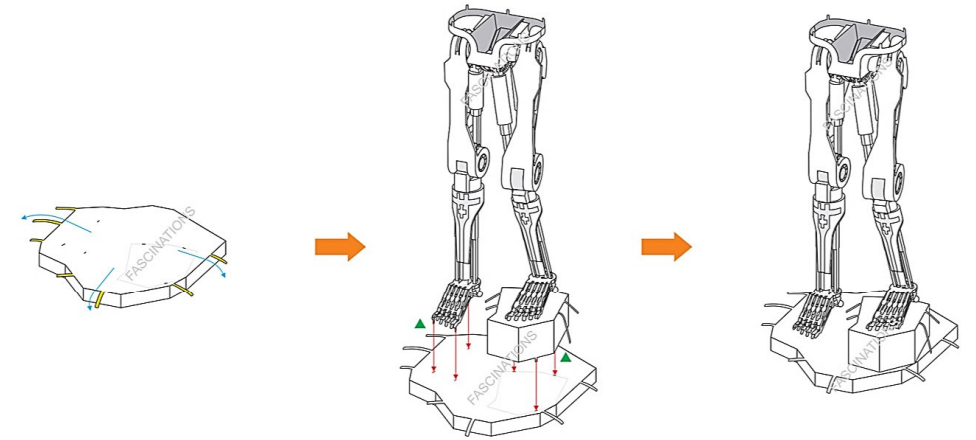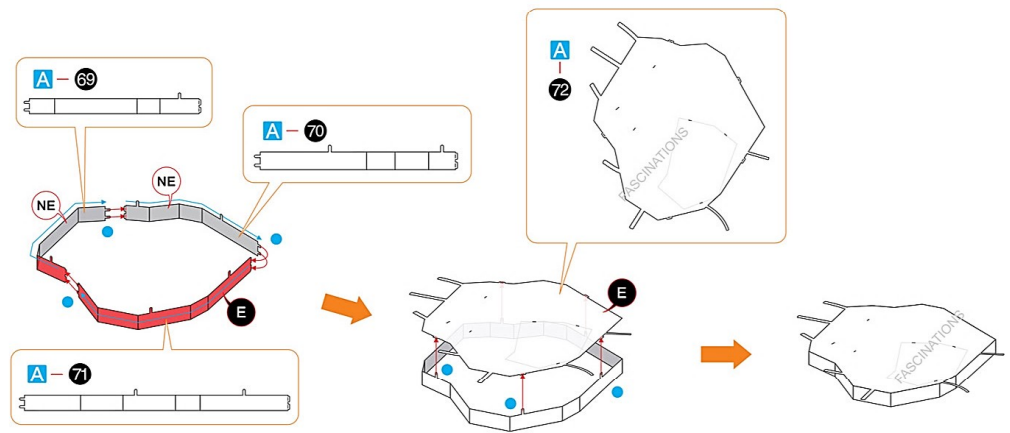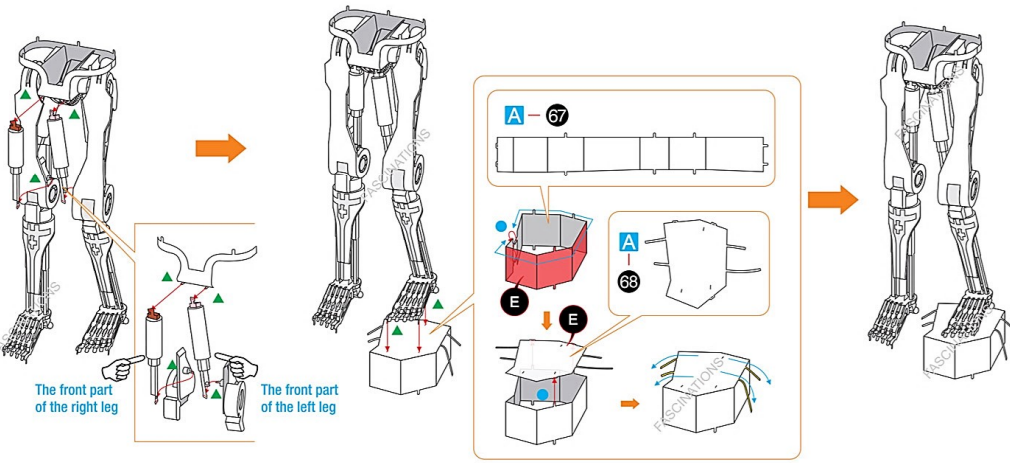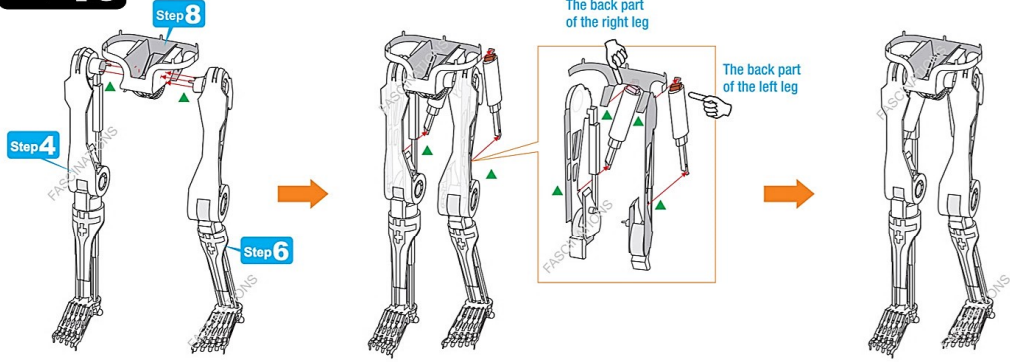







Step 11

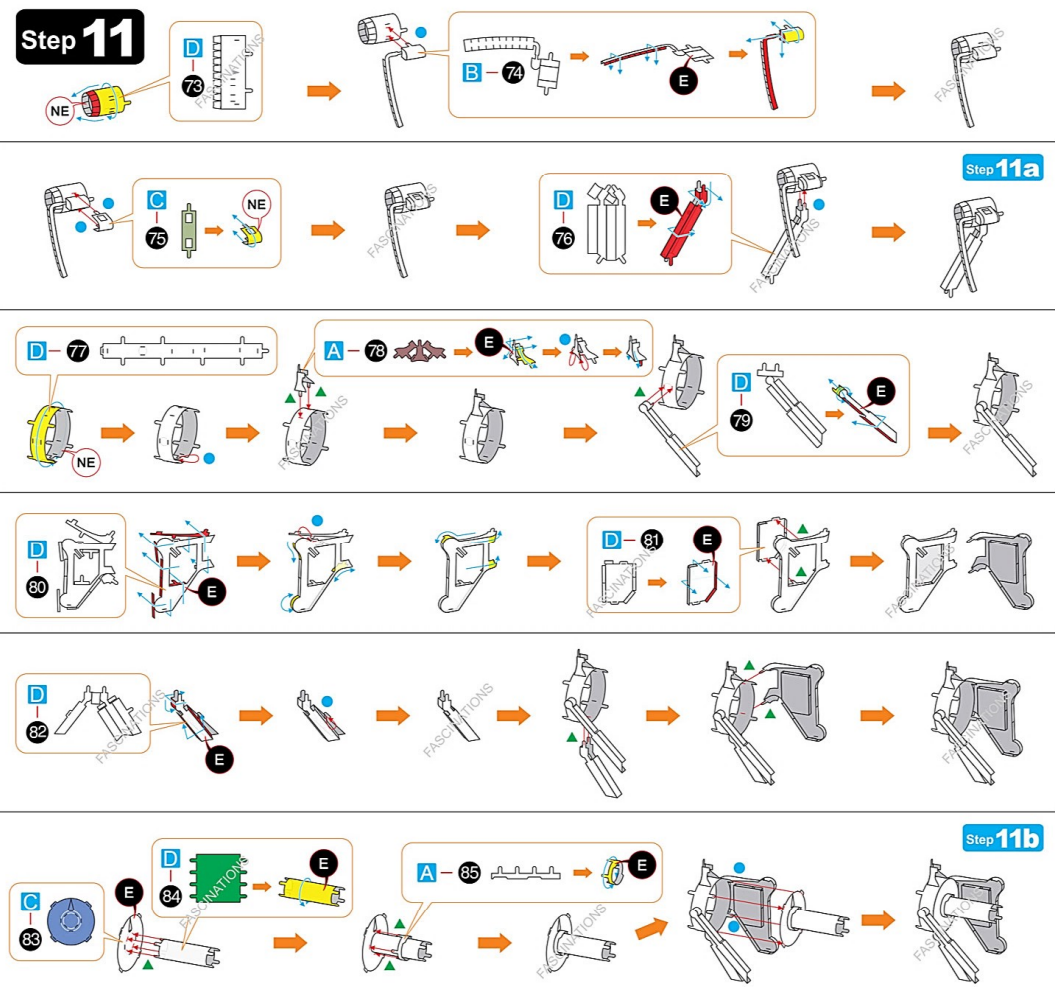


Step 12






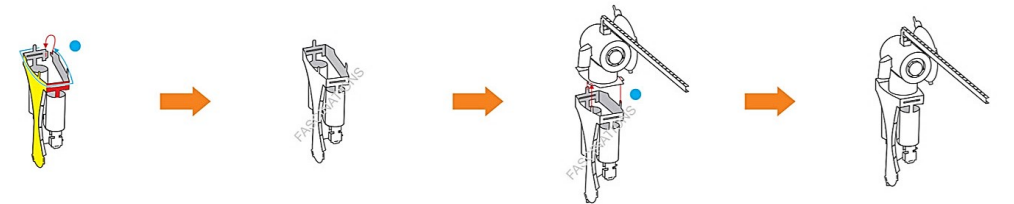
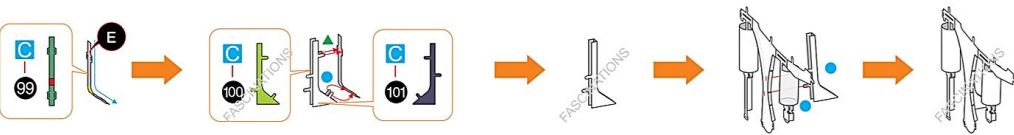
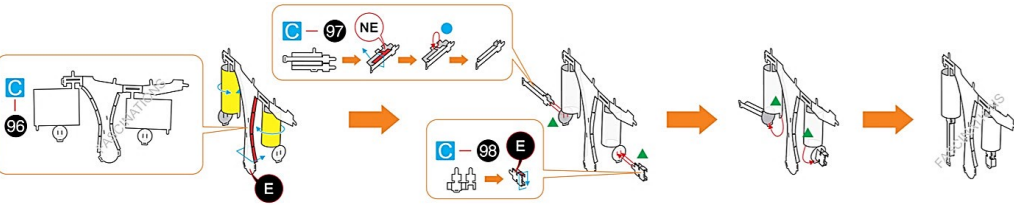
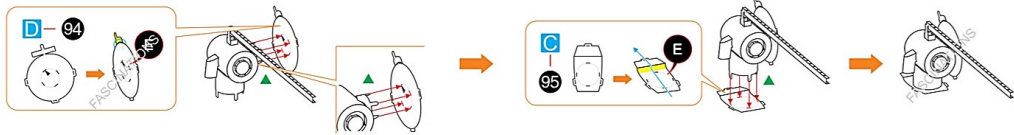









Step 13




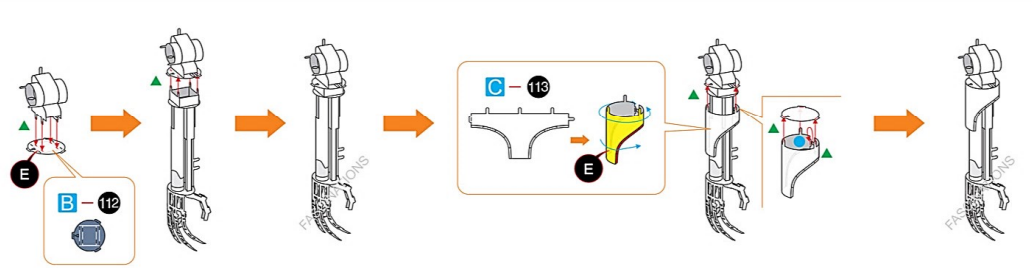
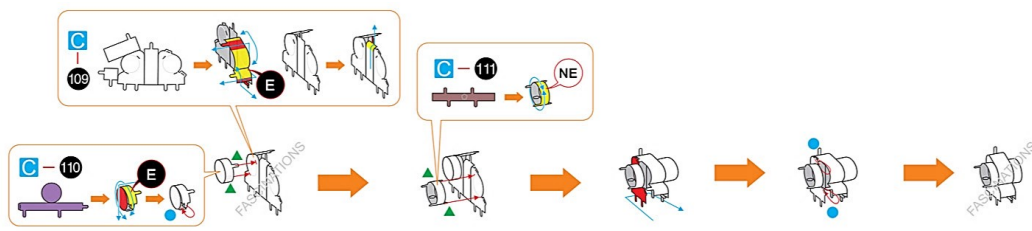
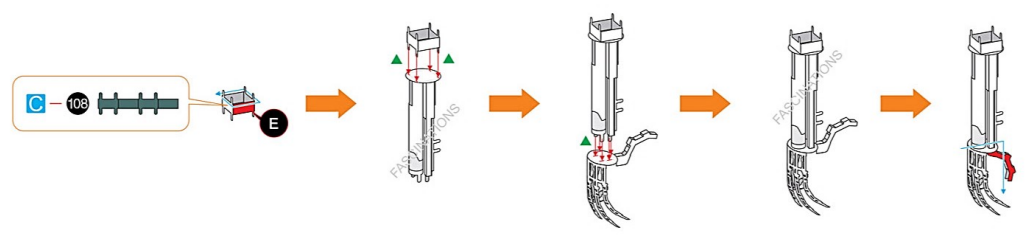
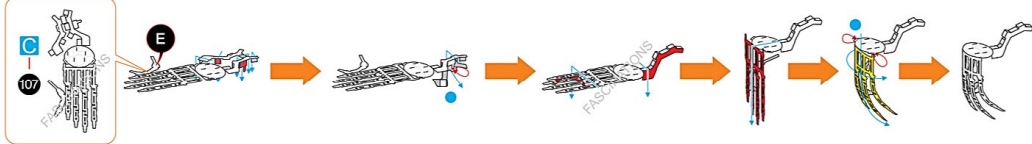
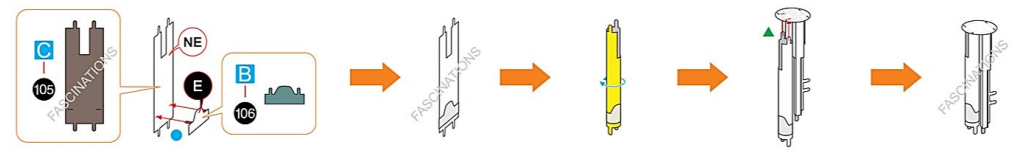
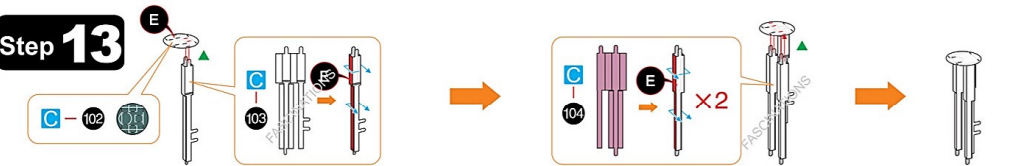











Step 14







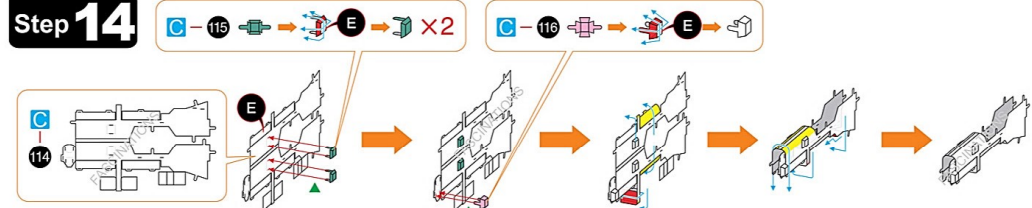


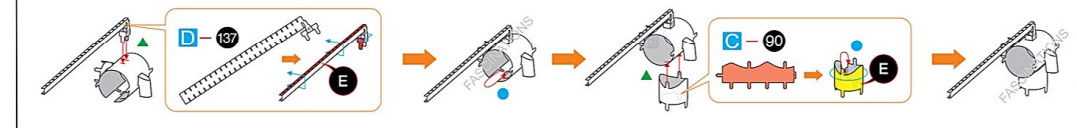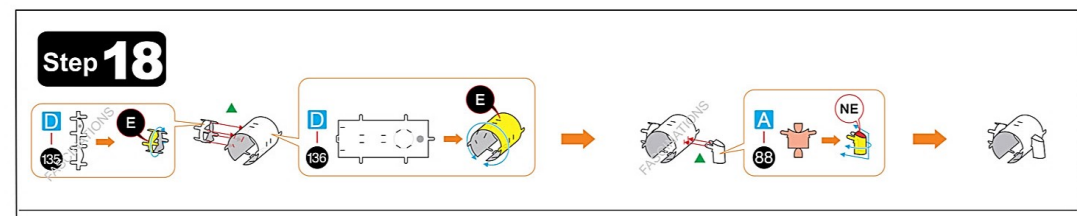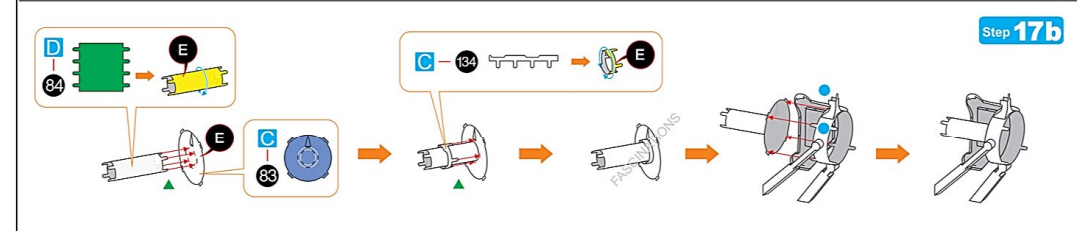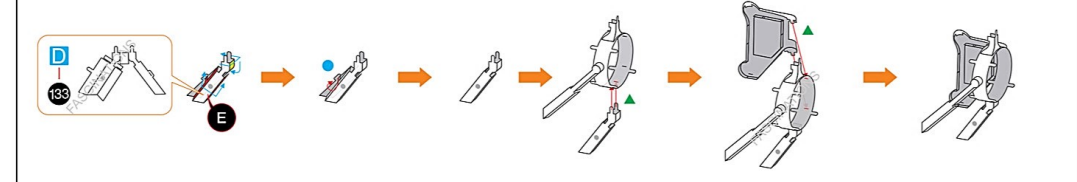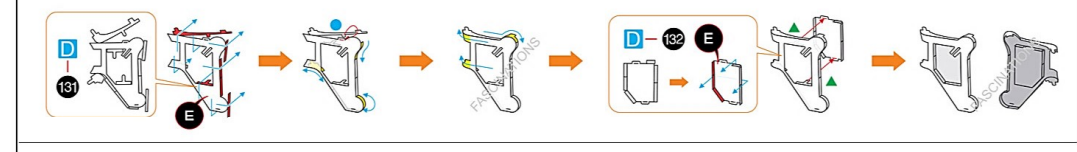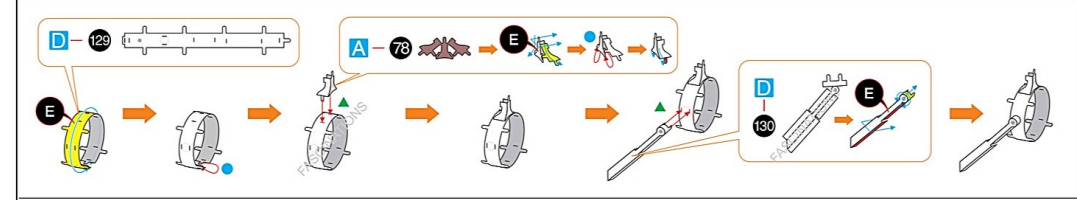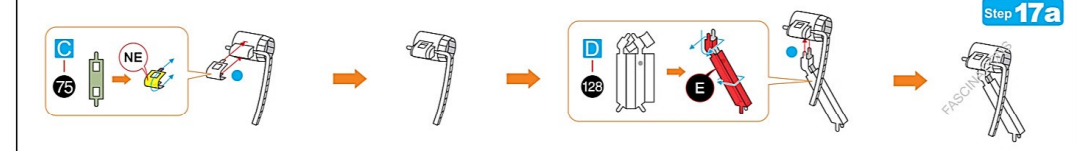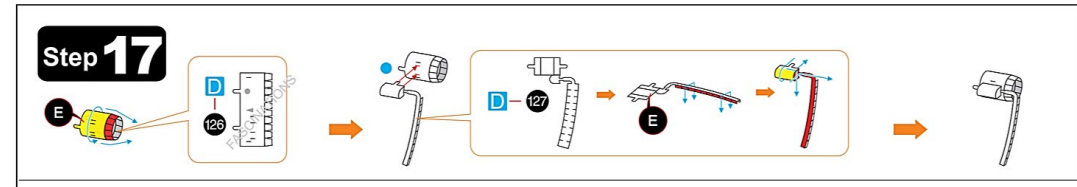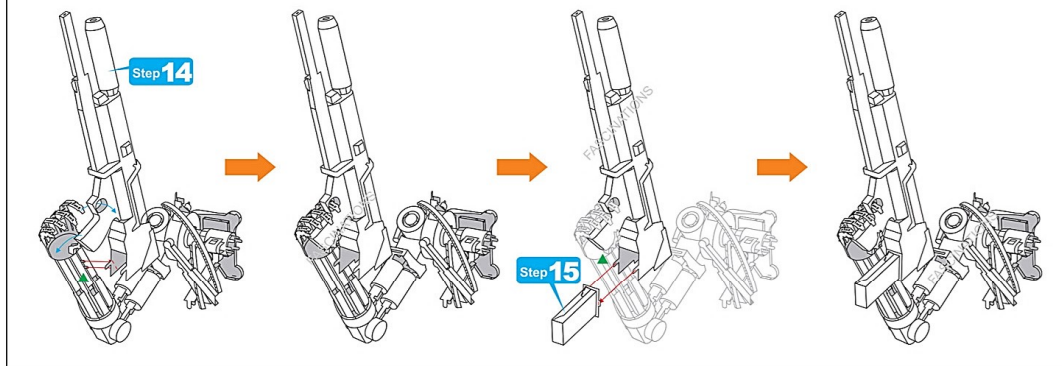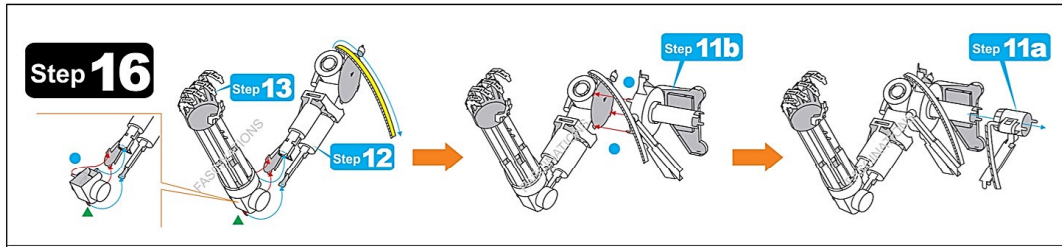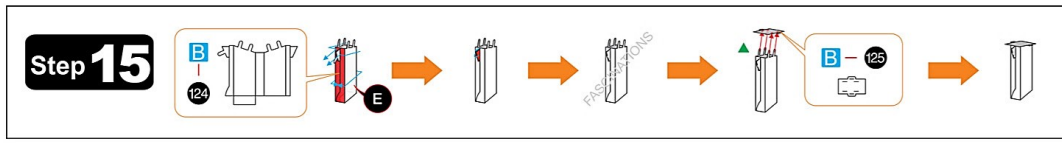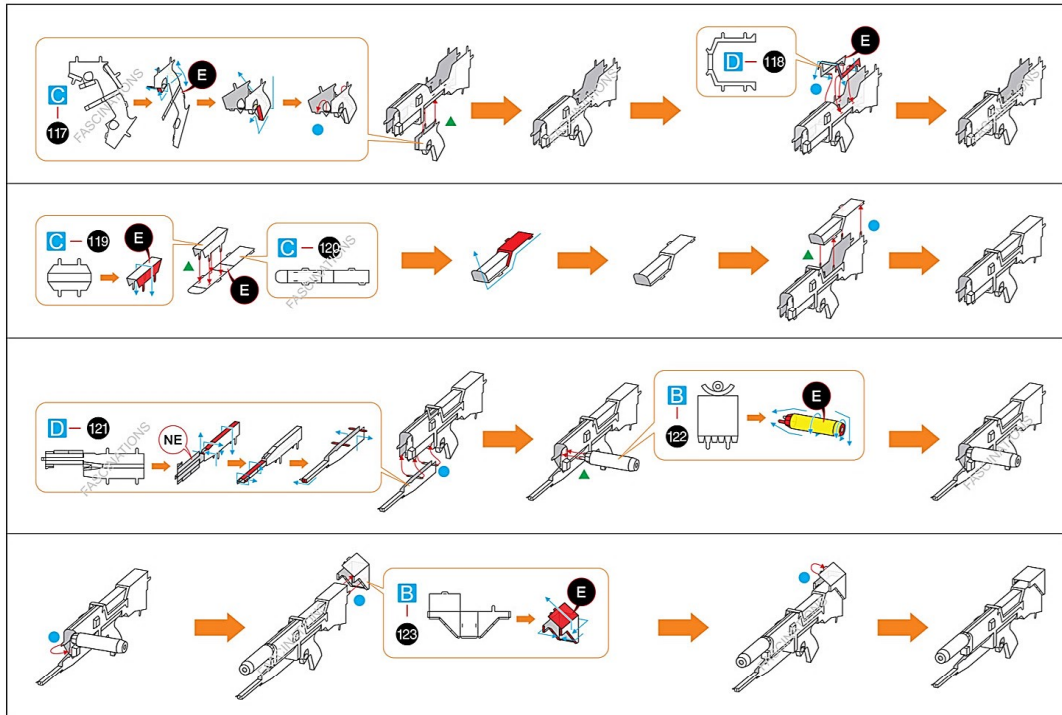


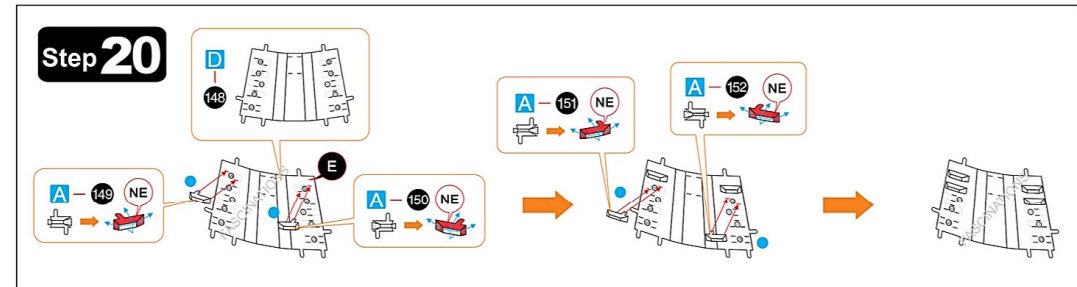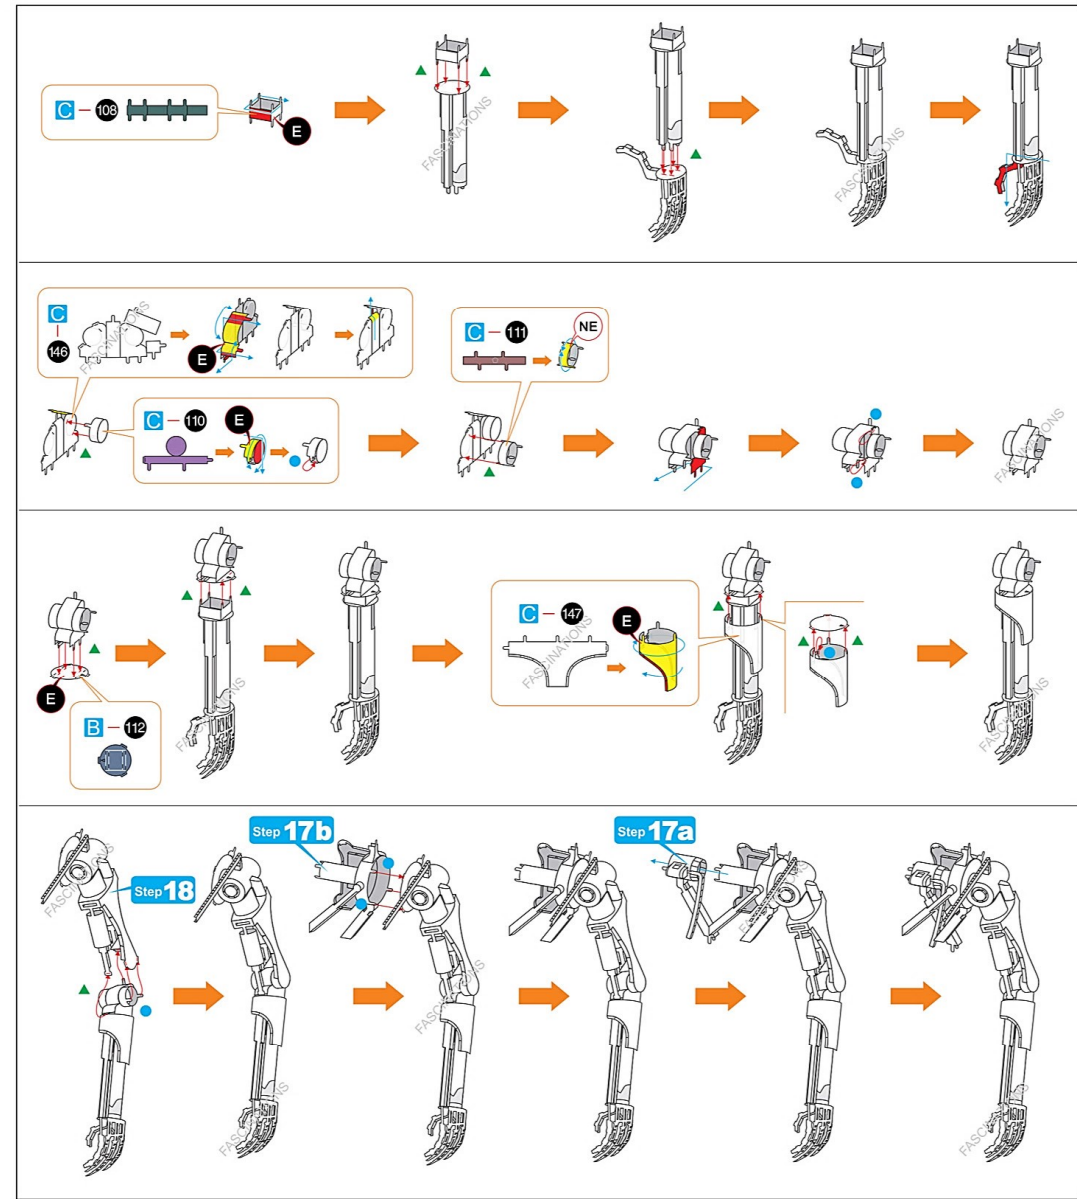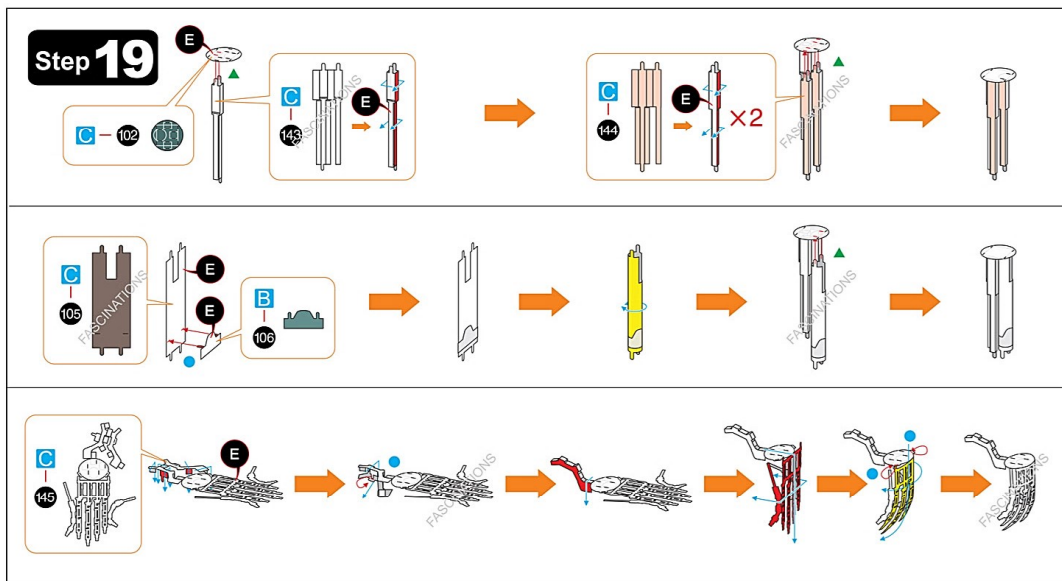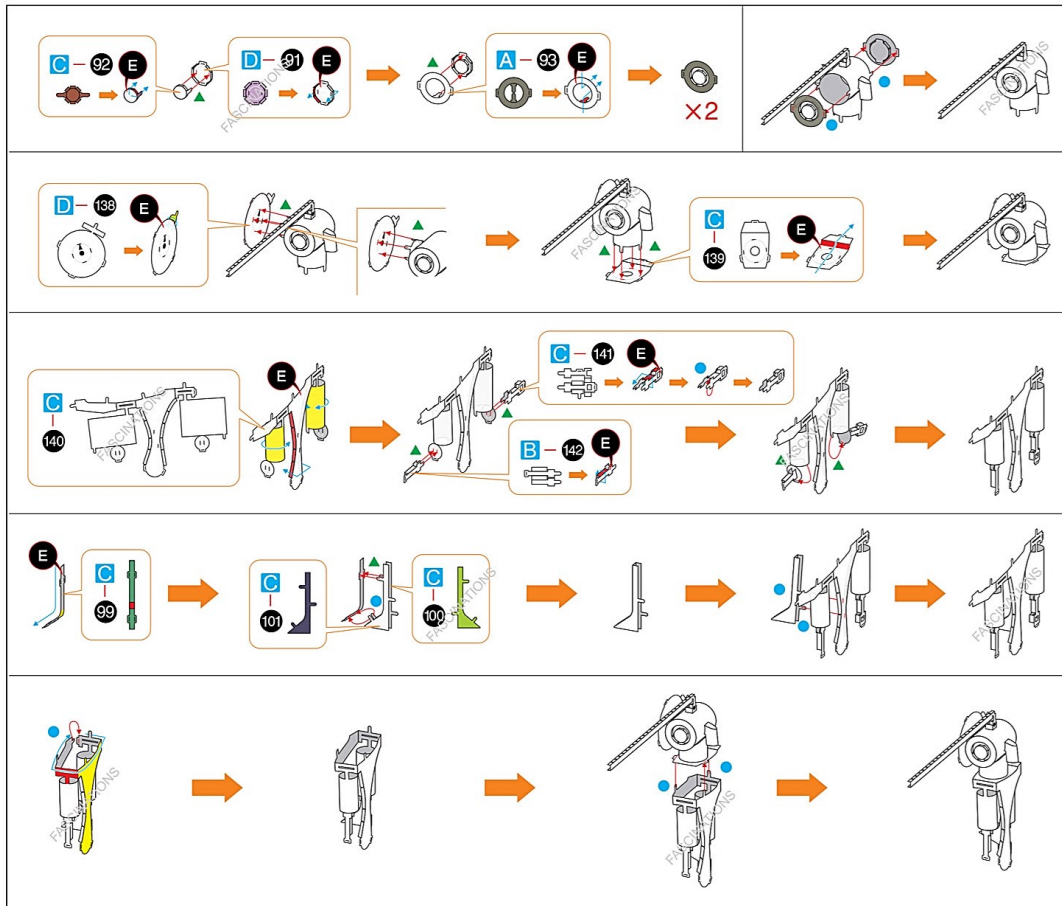

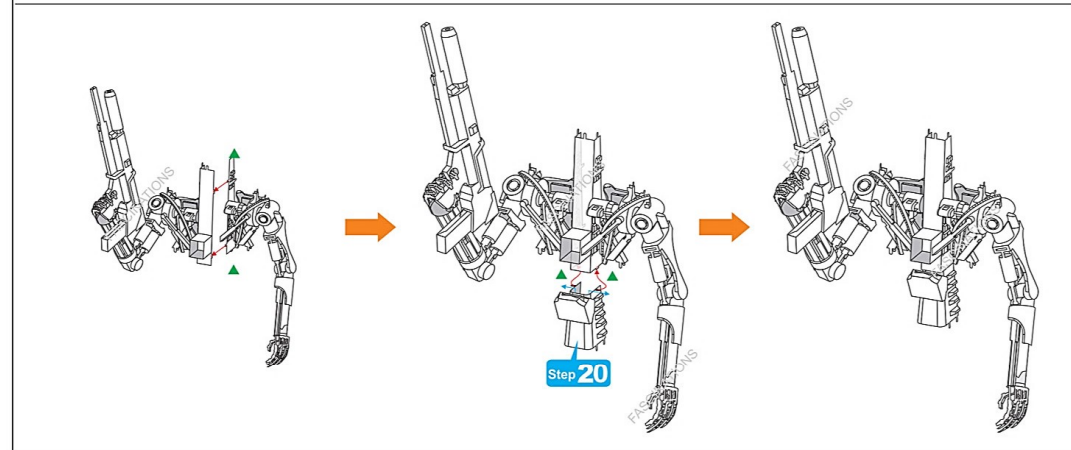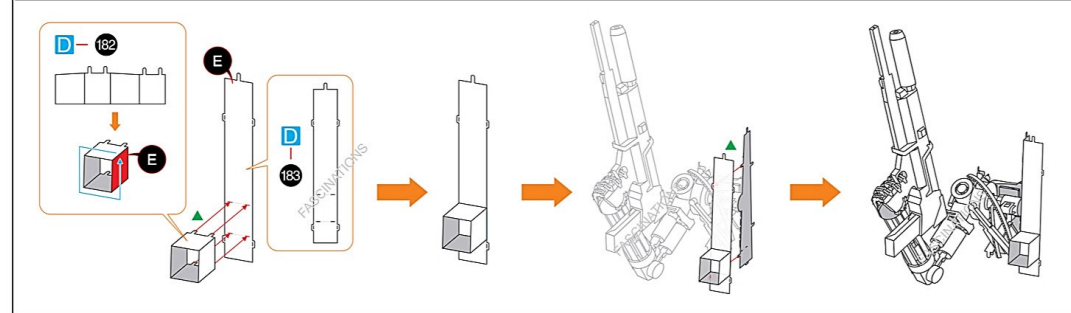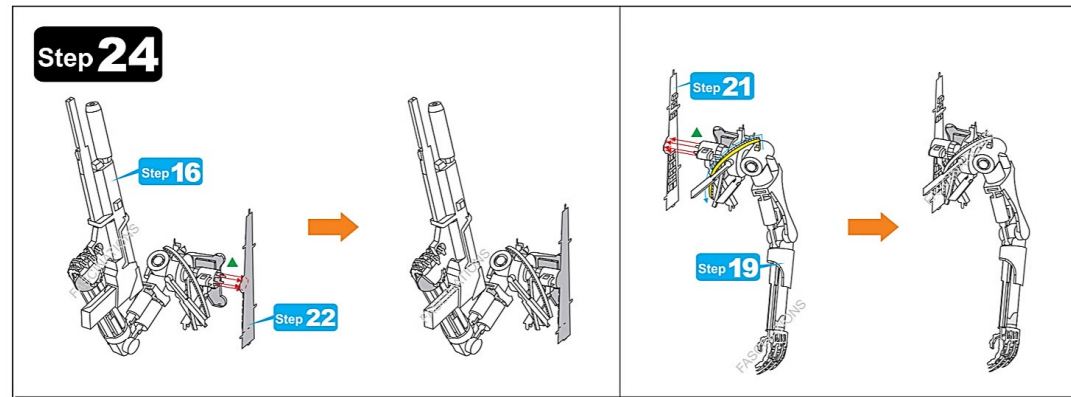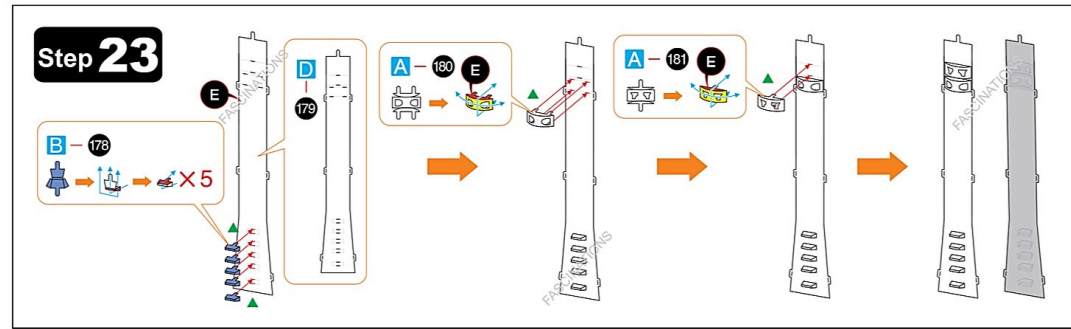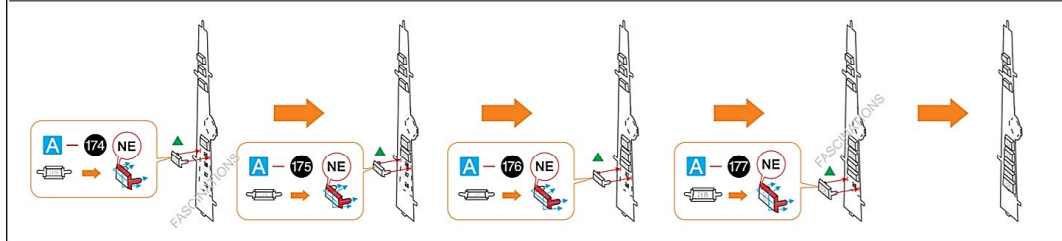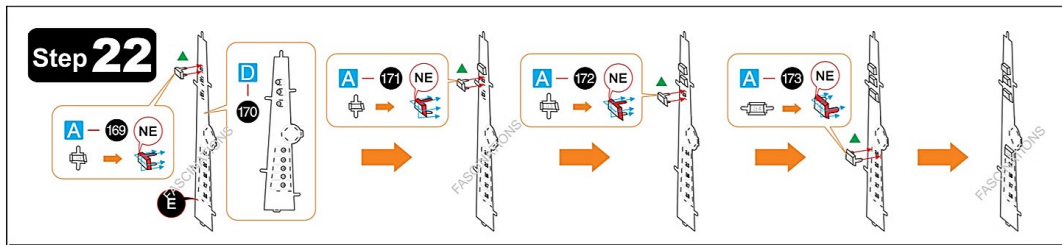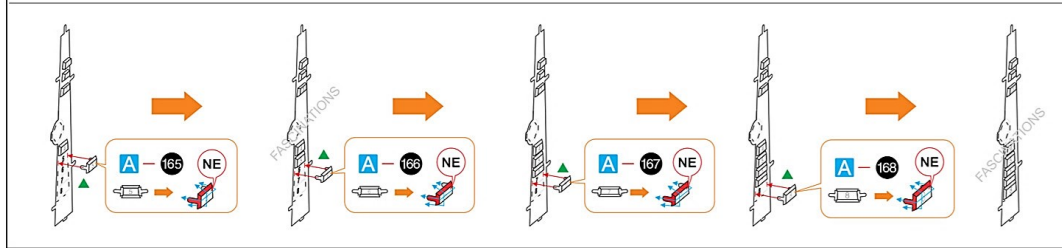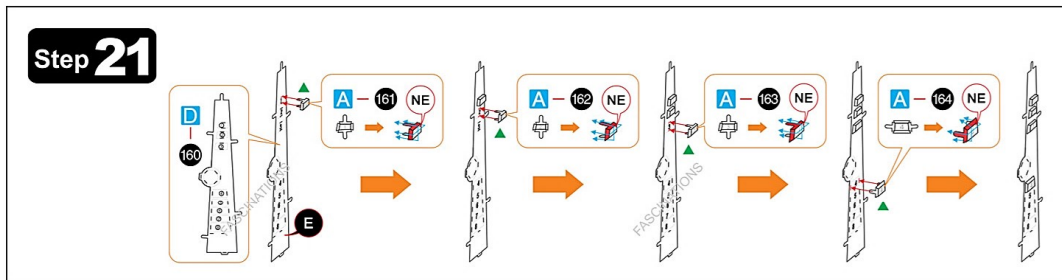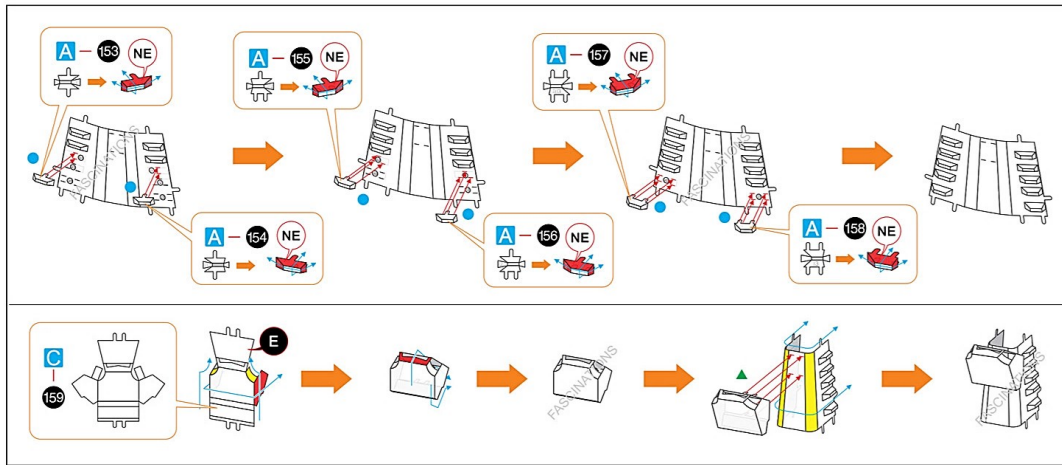

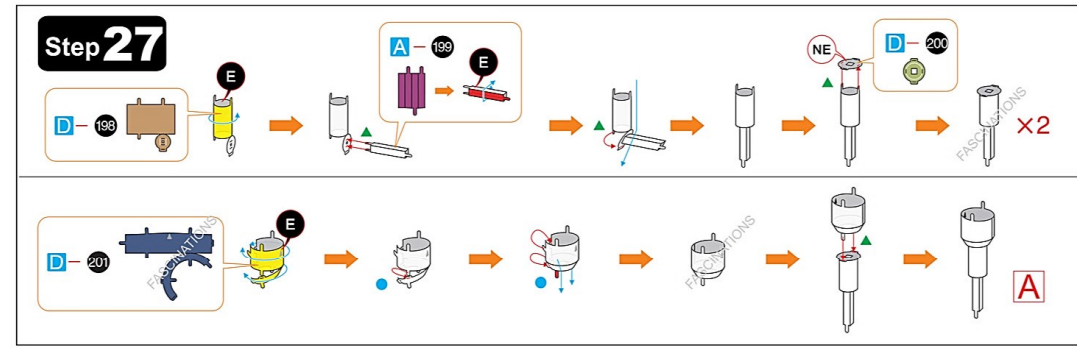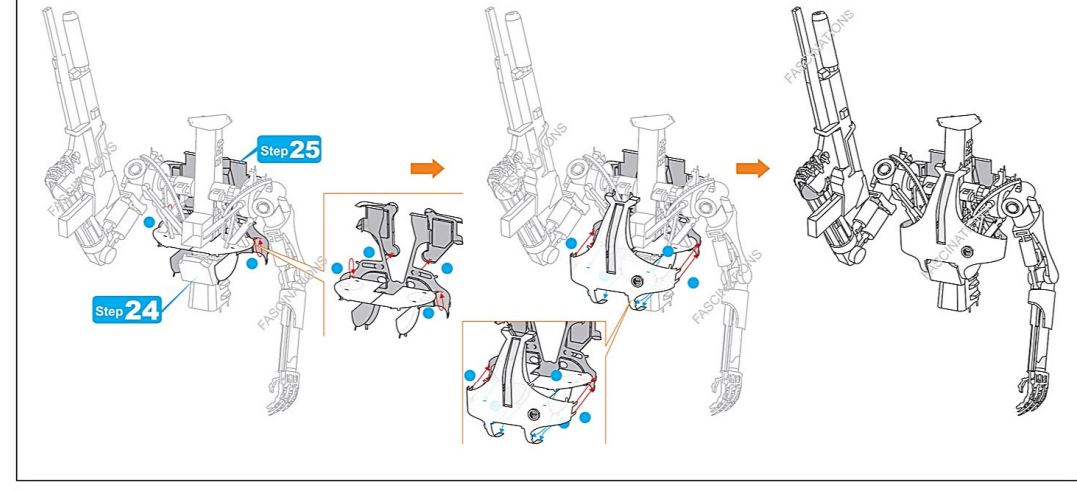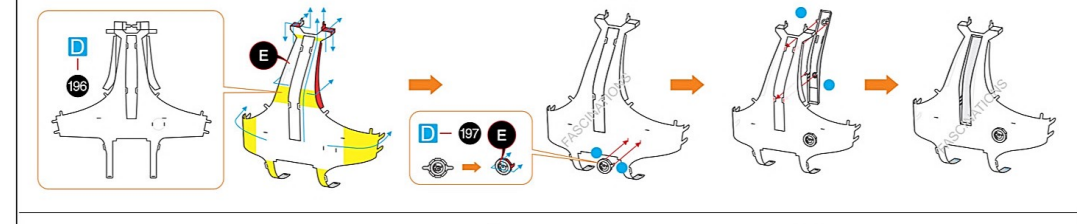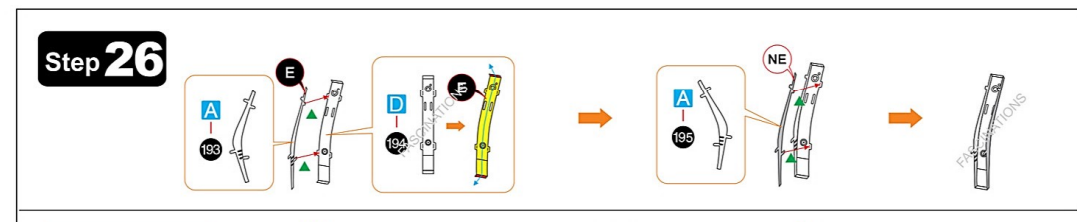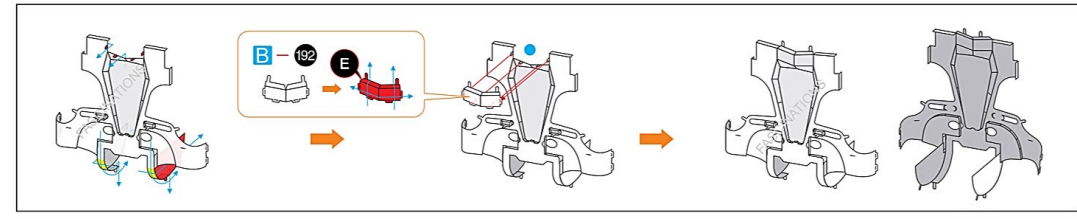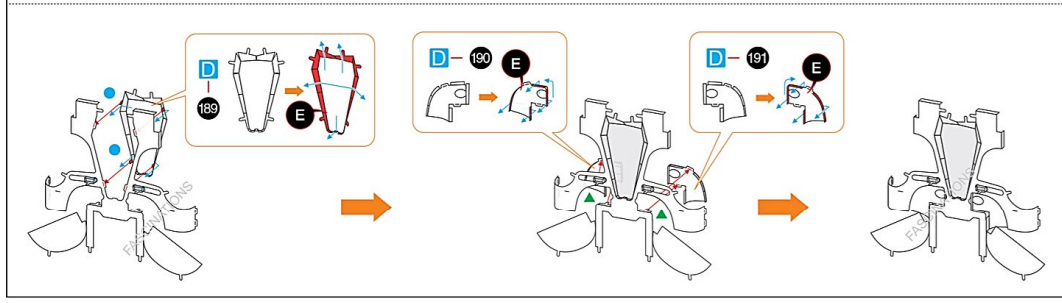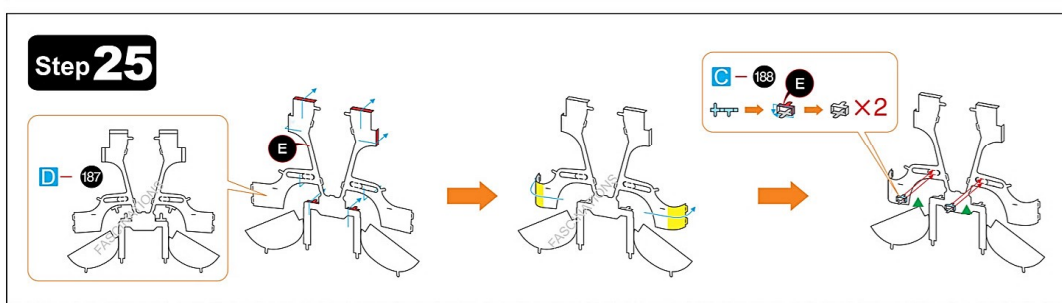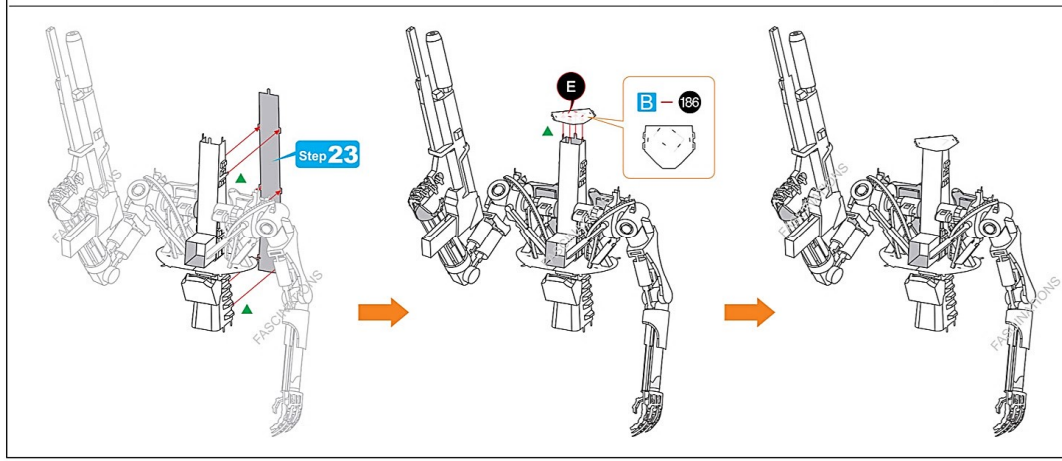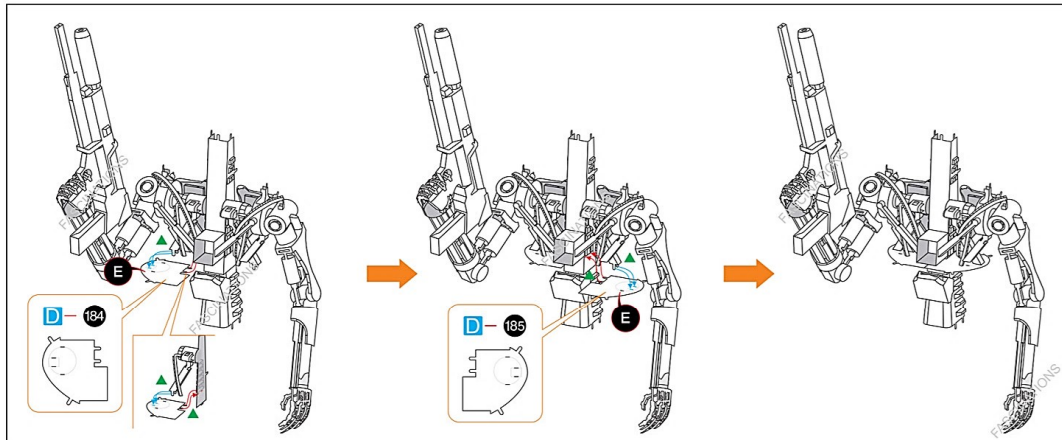

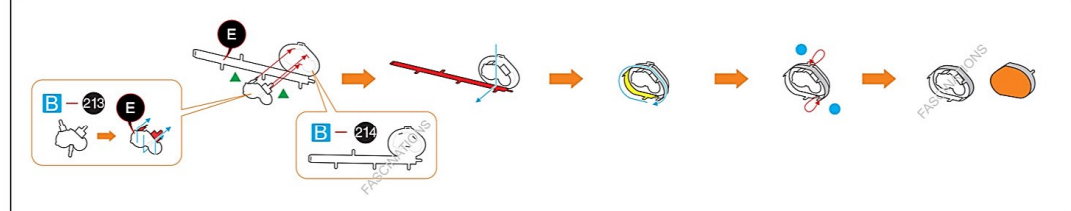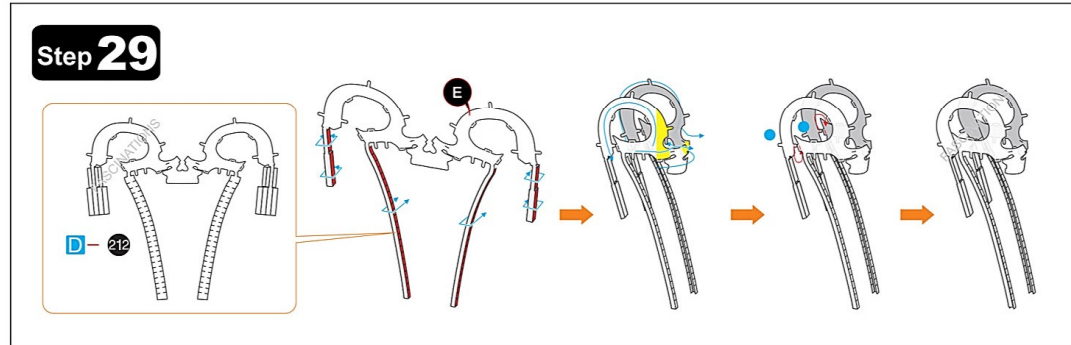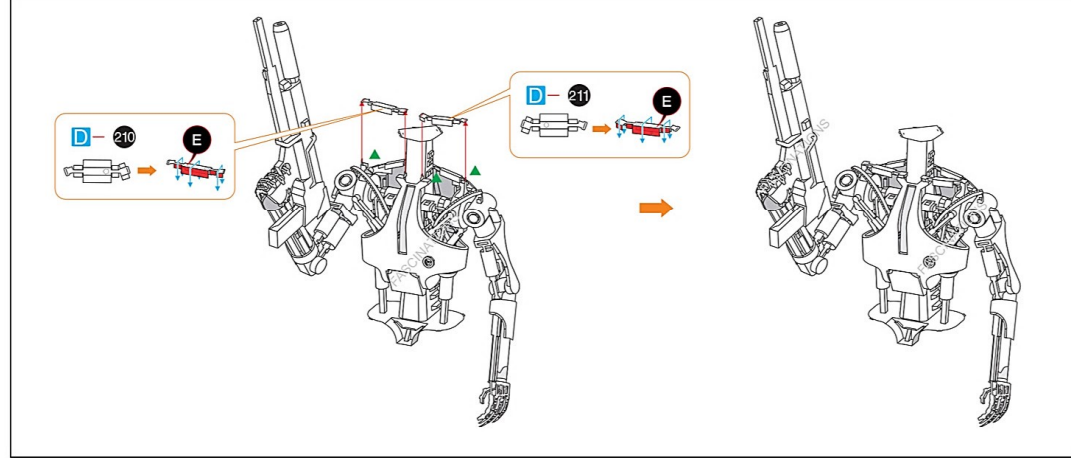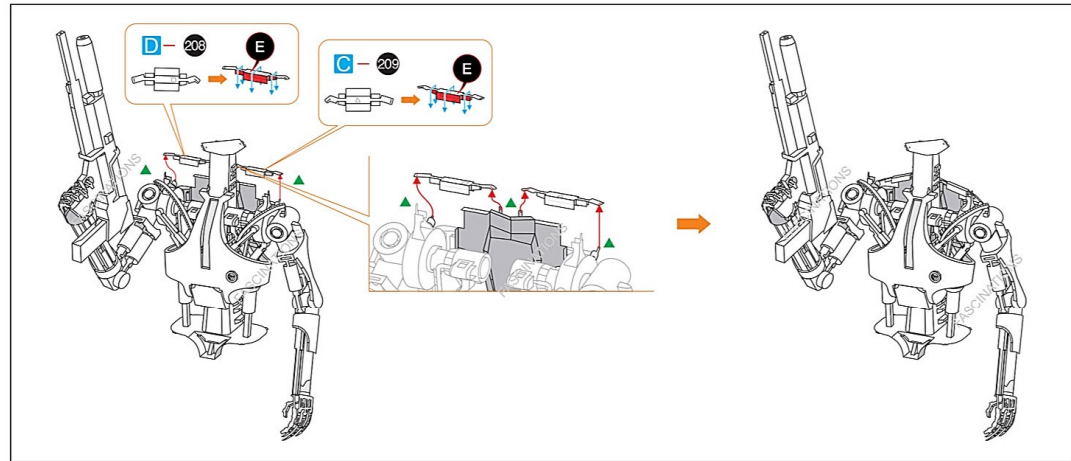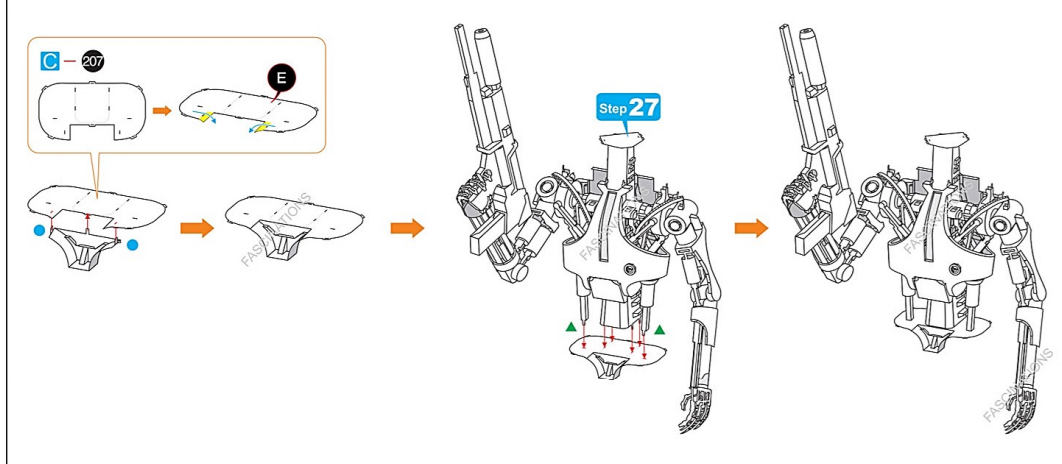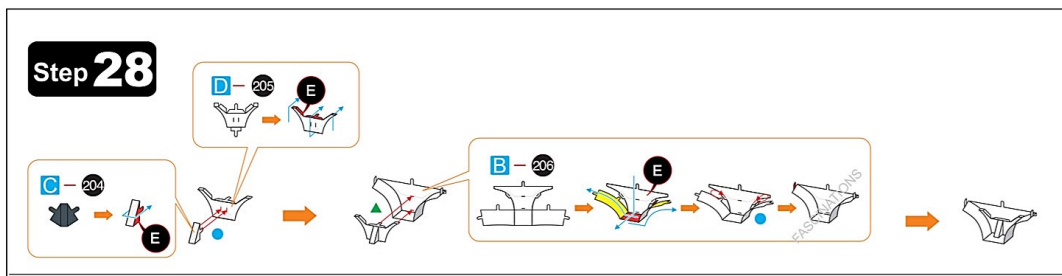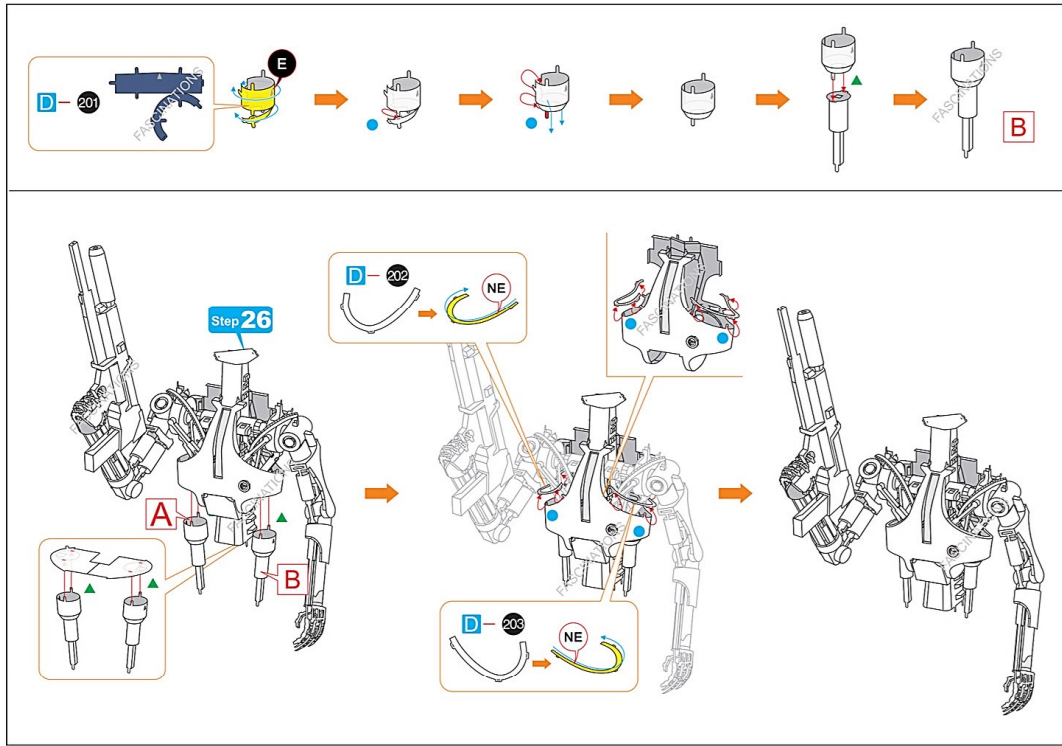

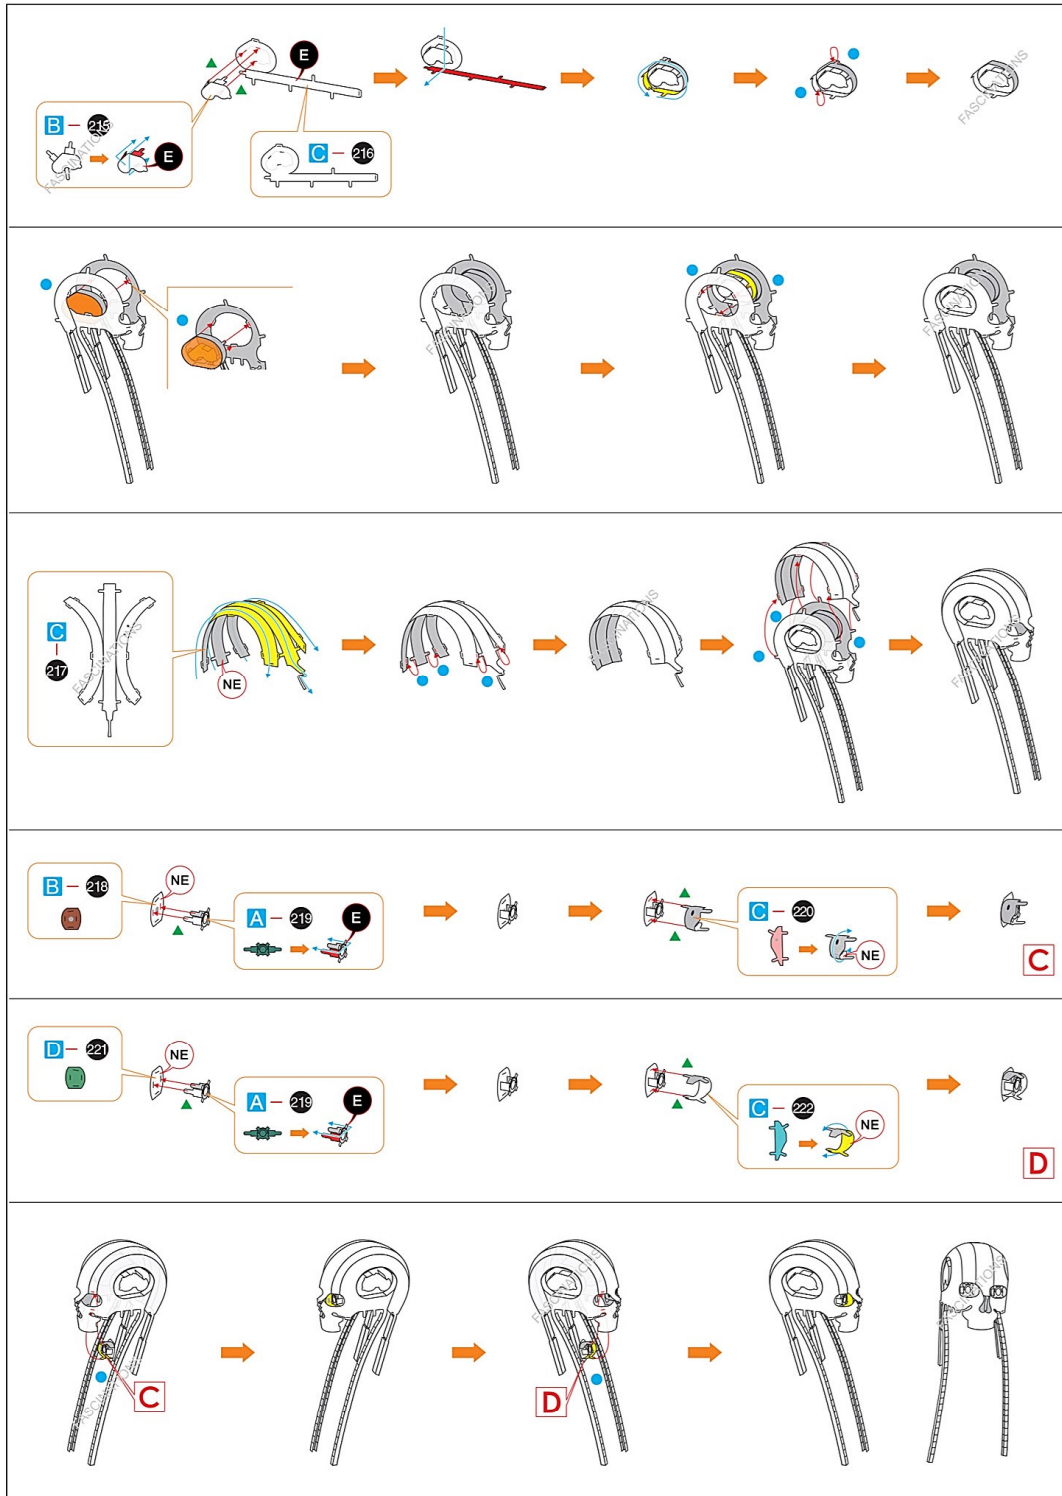

Step 30

